


MI-98291000

Delta Picknick

Delta Picknick, hout, fundatie onder maaiveld
Delta pique-nique, bois, fondation sous le sol fini
Delta Picknickgestell, Holz, Platzierung unter Geländeoberfläche
Delta Picnic set, wood, foundation under surface

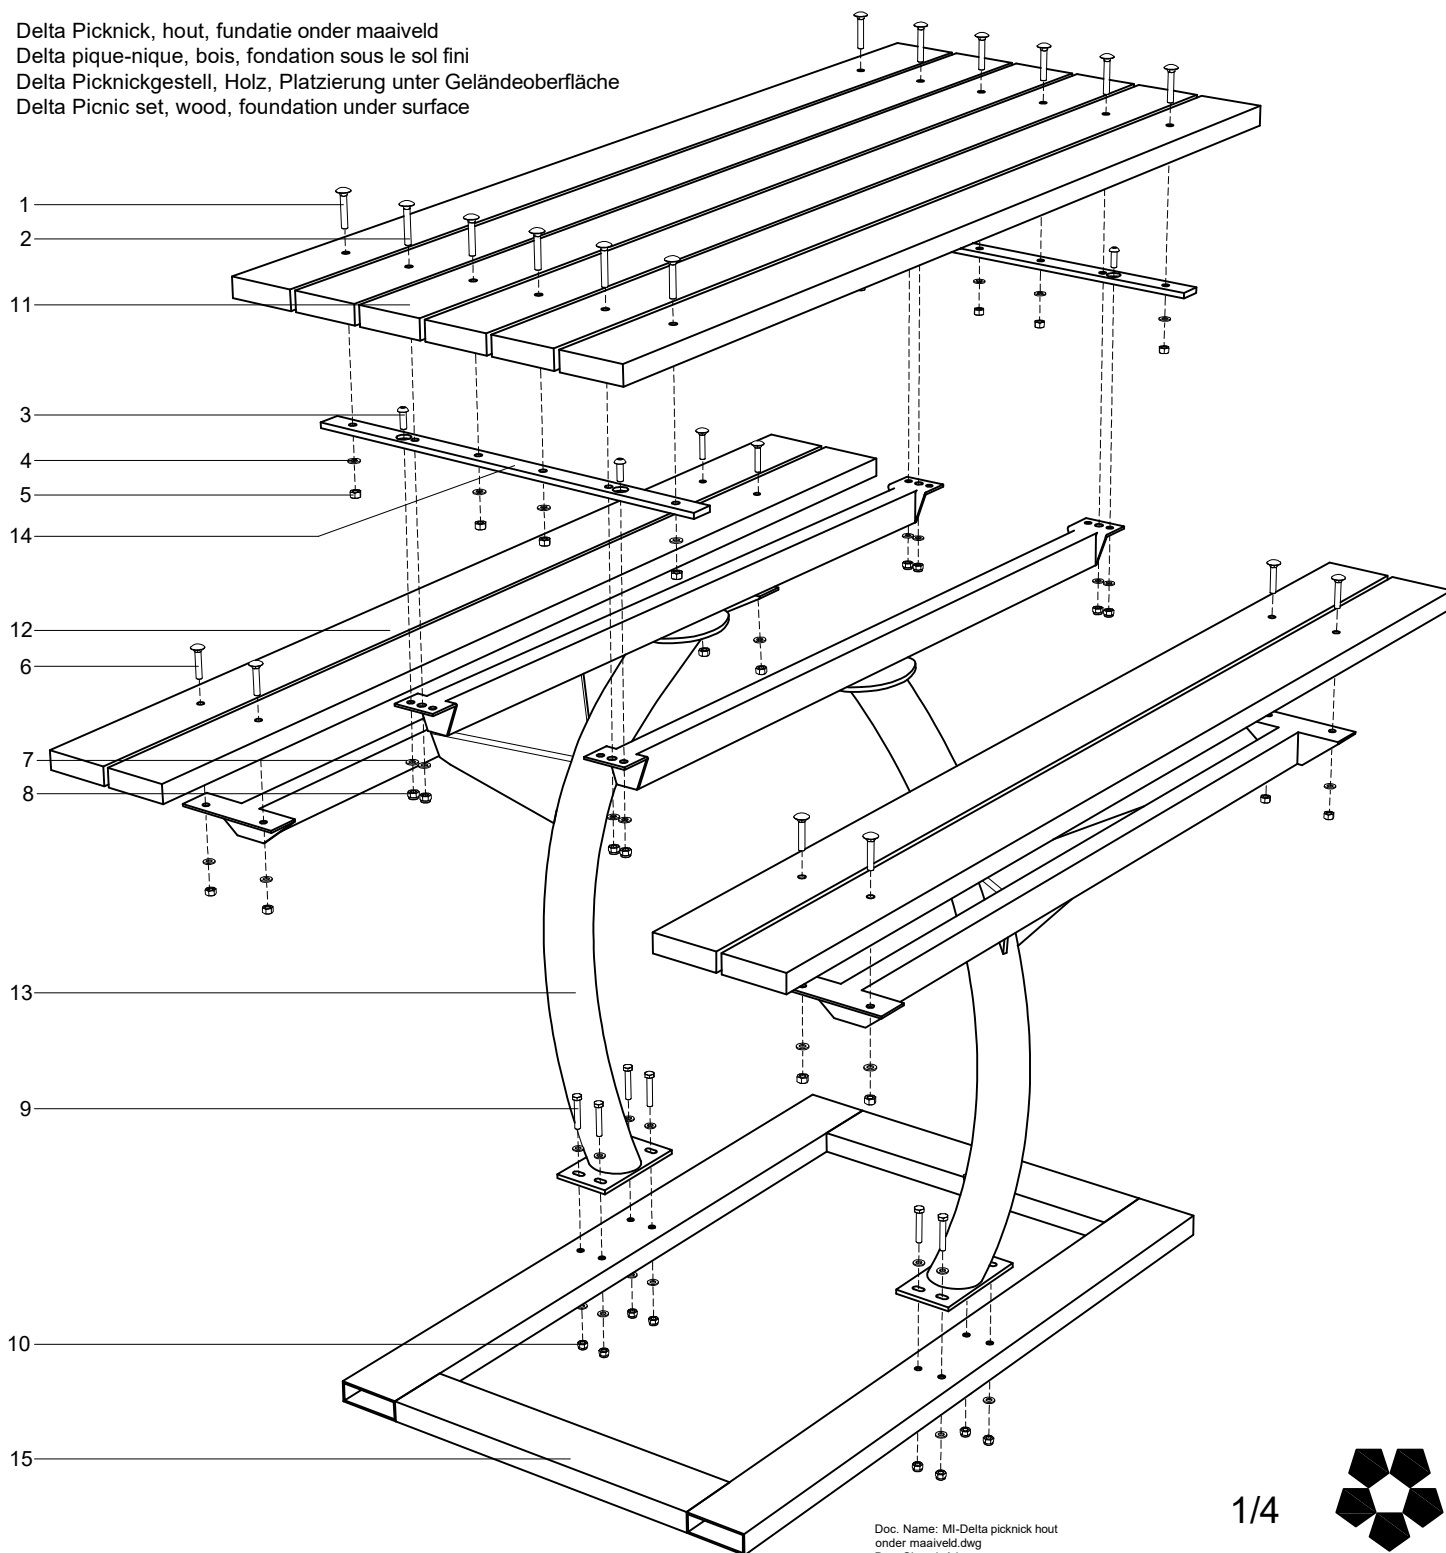

Doc. Name: MI-Delta picknick hout
onder maaiveld.dwg
Doc. Size: 4xA4
Rev. 01, 17-8-2006 RHO,
Updated Rev.02 25-01-2018 BWI

1/4




www.velopa.com

Velopa


Item	Qty	Art.nr.					
1	8x	51840100	M10x60	slotbout	boulon col carré	Schlossbolzen	square neck bolt
2	4x	51840110	M10x65	slotbout	boulon col carré	Schlossbolzen	square neck bolt
3	4x	54930020	M10x30	laagbolkop bzK (RVS)	vis à tête bombée à six pans creux (Inox)	Rundkopfbolzen (Edelstahl)	socket head bolt (stainless steel)
4	36x	54140000	M10	ring	rondelles plates	Verschlußring	washer
5	20x		M10	moer	écrou	Mutter	nut
6	8x	51840090	M10x55	slotbout	boulon col carré	Schlossbolzen	square neck bolt
7	4x	54900410	M10	ring (RVS)	rondelles plates (inox)	Verschlußring (Edelstahl)	washer (stainless steel)
8	4x	54900350	M10	borgmoer (RVS)	écrou bloquant (inox)	Sicherungsmutter (Edelstahl)	prevailing torque nut (stainless steel)
9	8x	52040110	M10x60	tapbout	vis à tête hexagonale	Sechskantbolzen	hexagon bolt
10	8x	54340000	M10	borgmoer	écrou bloquant	Sicherungsmutter	prevailing torque nut
11	6x		L=1800	tafelplank	planche de table	Tischbrett	table shelf
12	4x		L=2000	zittingplank	planche d'assise	Sitzflächebrett	seat shelf
13	2x	30125050		poet	bande d'attachement	Gestellbein	foot
14	2x	30120010		bevestigingsstrip		Befestigungsstrip	attachment strip
15	1x	30125090		fundatieframe	chassis de fondation	Fundierungsgestell	foundation frame

1

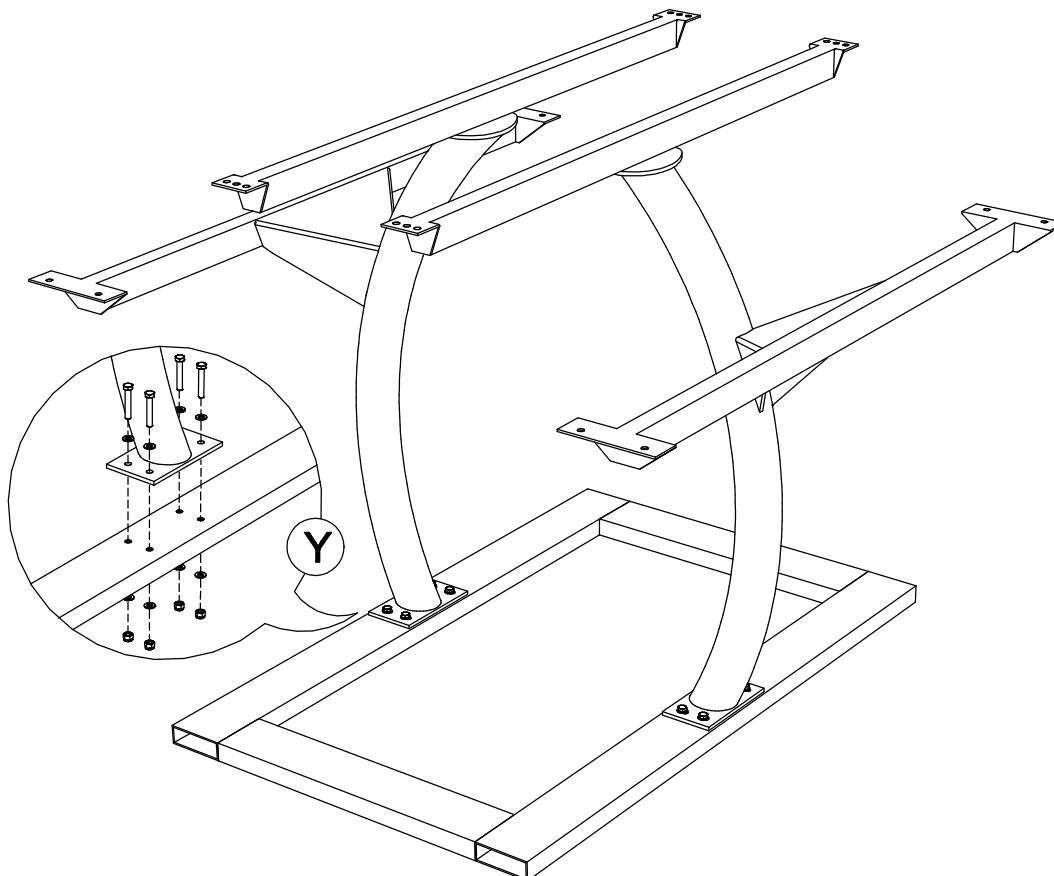


Stap 1,2,3: Alle bout-moerverbindingen nog niet aandraaien.
Etapes 1,2,3: Ne pas encore serrer les boulons.
Schritte 1,2,3: Alle Bolzenverbindungen noch nicht fest andrehen.
Steps 1,2,3: Do not yet tighten all bolt-nut connections.

2

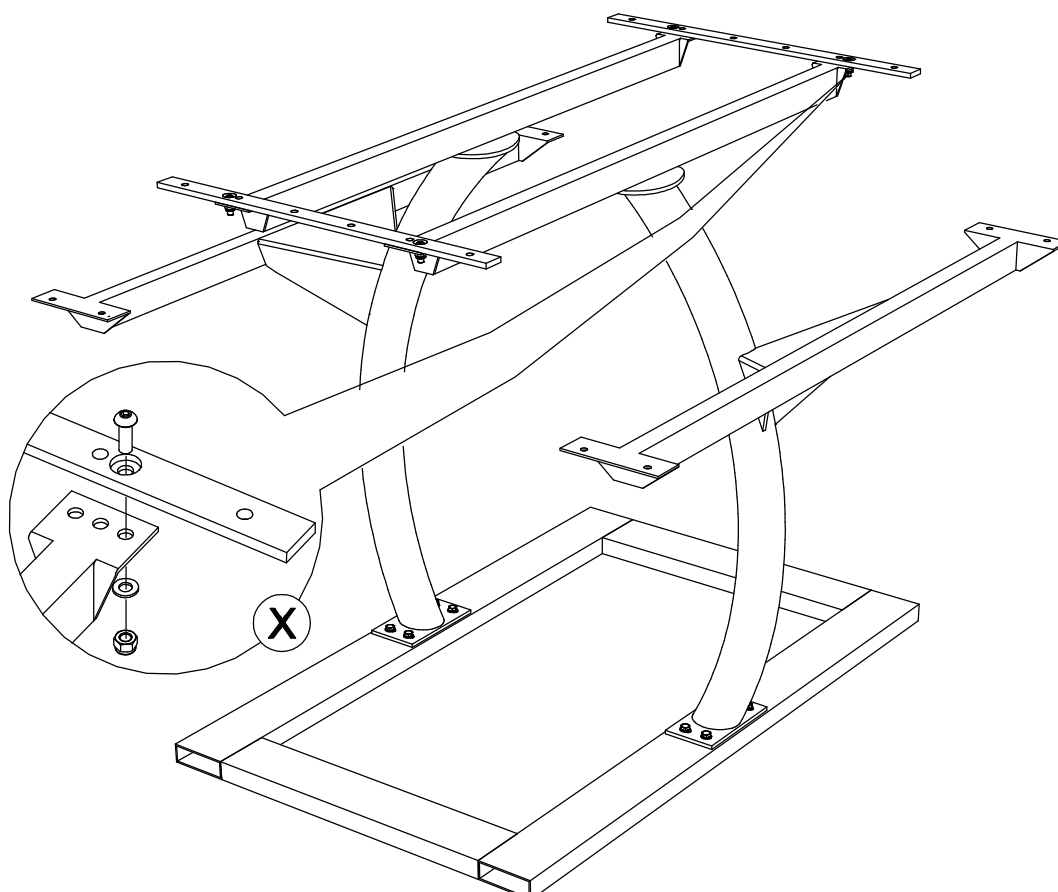

3

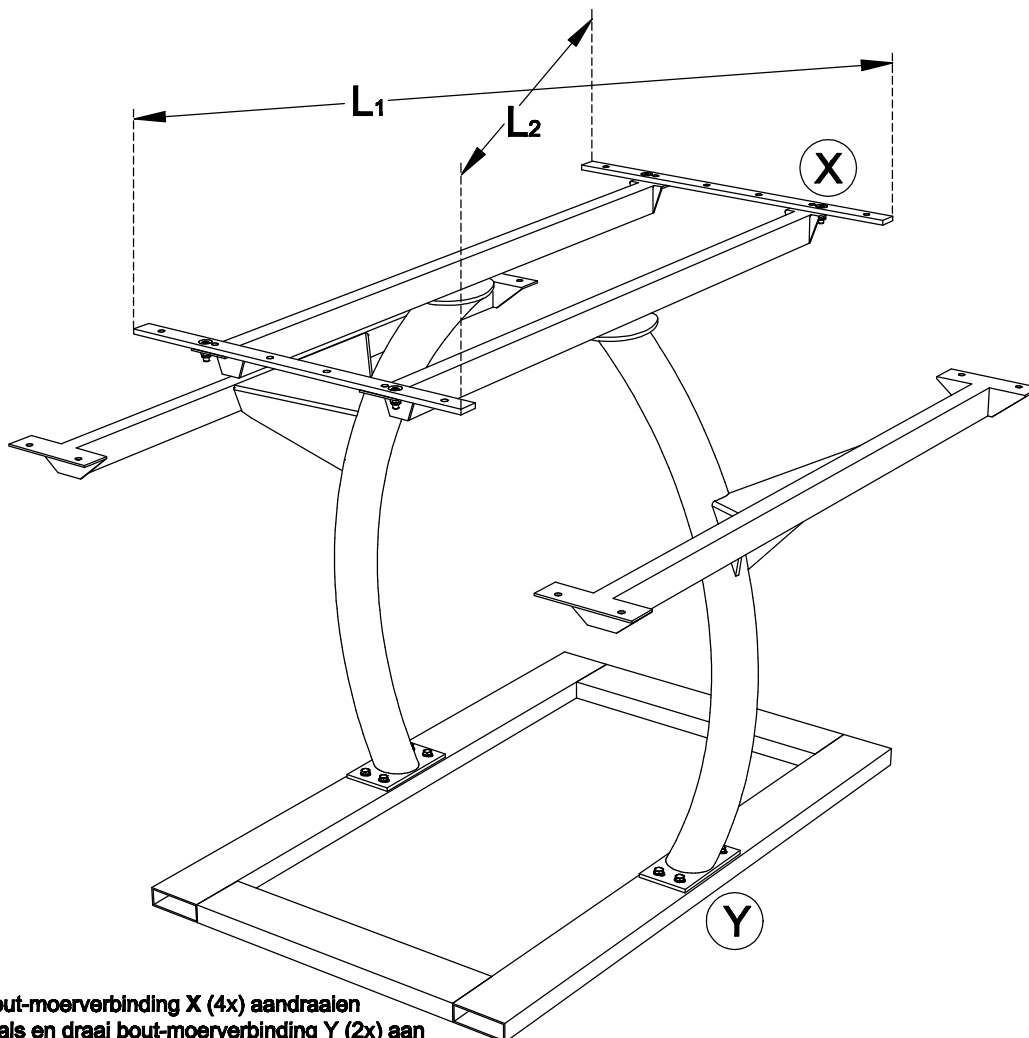


Controleer $L_1 = L_2$, dan bout-moerverbinding X (4x) aandraaien
 Controleer maten nogmaals en draai bout-moerverbinding Y (2x) aan

Contrôlez que $L_1 = L_2$, si c'est le cas, alors serrer les boulons X (4x)
 Vérifiez à nouveau les mesures et serrez les fixations Y (2x)

Kontrollieren Sie ob $L_1 = L_2$, anschließend Bolzenverbindungen X (4x) festdrehen
 Kontrollieren Sie obige Maße nochmals, anschließend Bolzenverbindungen Y (2x) festdrehen

Check that $L_1 = L_2$, then turn bolt in nut connection X (4x)
 Check dimensions once more and turn bolt in nut connection Y (2x)

4

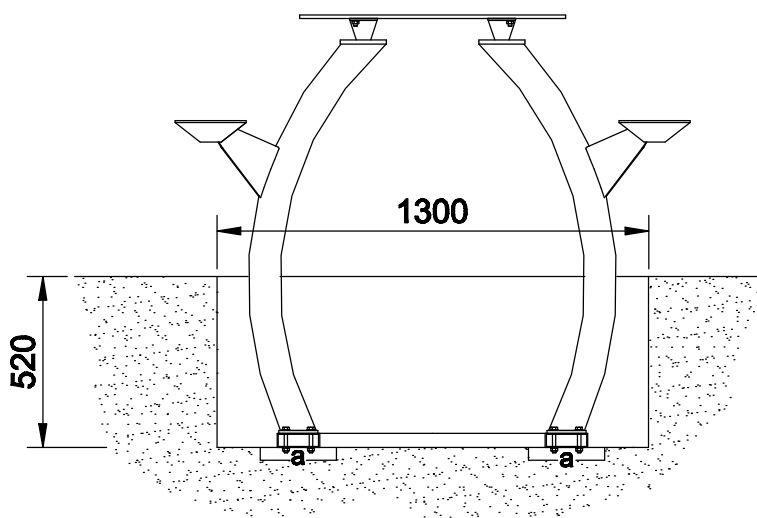

Graaf een gat 1300x1700x520 mm; plaats 4 steltegels (a); gat dichten en aanstraten.
 Creusez un trou de 1300x1700x520 mm; placez 4 dalles de réglage (a); remblayez le trou et surfacez.

Graben Sie ein Loch $L \times B = 1300 \times 1700$ mm; Tiefe 520 mm; Gestell platzieren auf 4 Richtplatten (a);
 Loch zumachen und zupflastern.


Dig a hole 1300x1700x520 mm; place 4 adjustment tiles (a); fill hole and pave.

5

2
(4x)

4
(4x)

5
(4x)

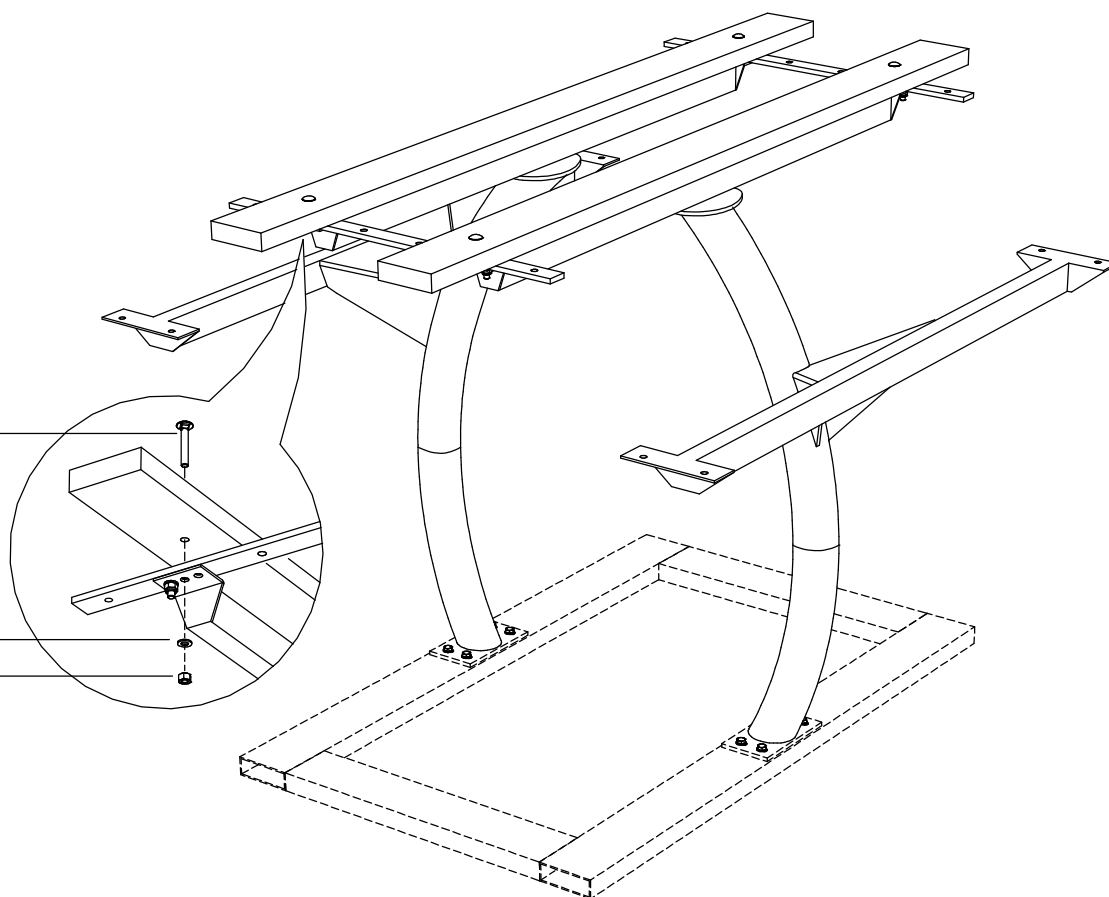

6

1
(8x)

6
(8x)

4
(16x)

5
(16x)

