

MI- 98195510

Piano


art.nr. 01195510

Piano bank, fundatie onder maaiveld

Banc Piano, fondation sous le sol fini

Piano Bank, Platzierung unter Geländeoberfläche

Piano bench, foundation under surface

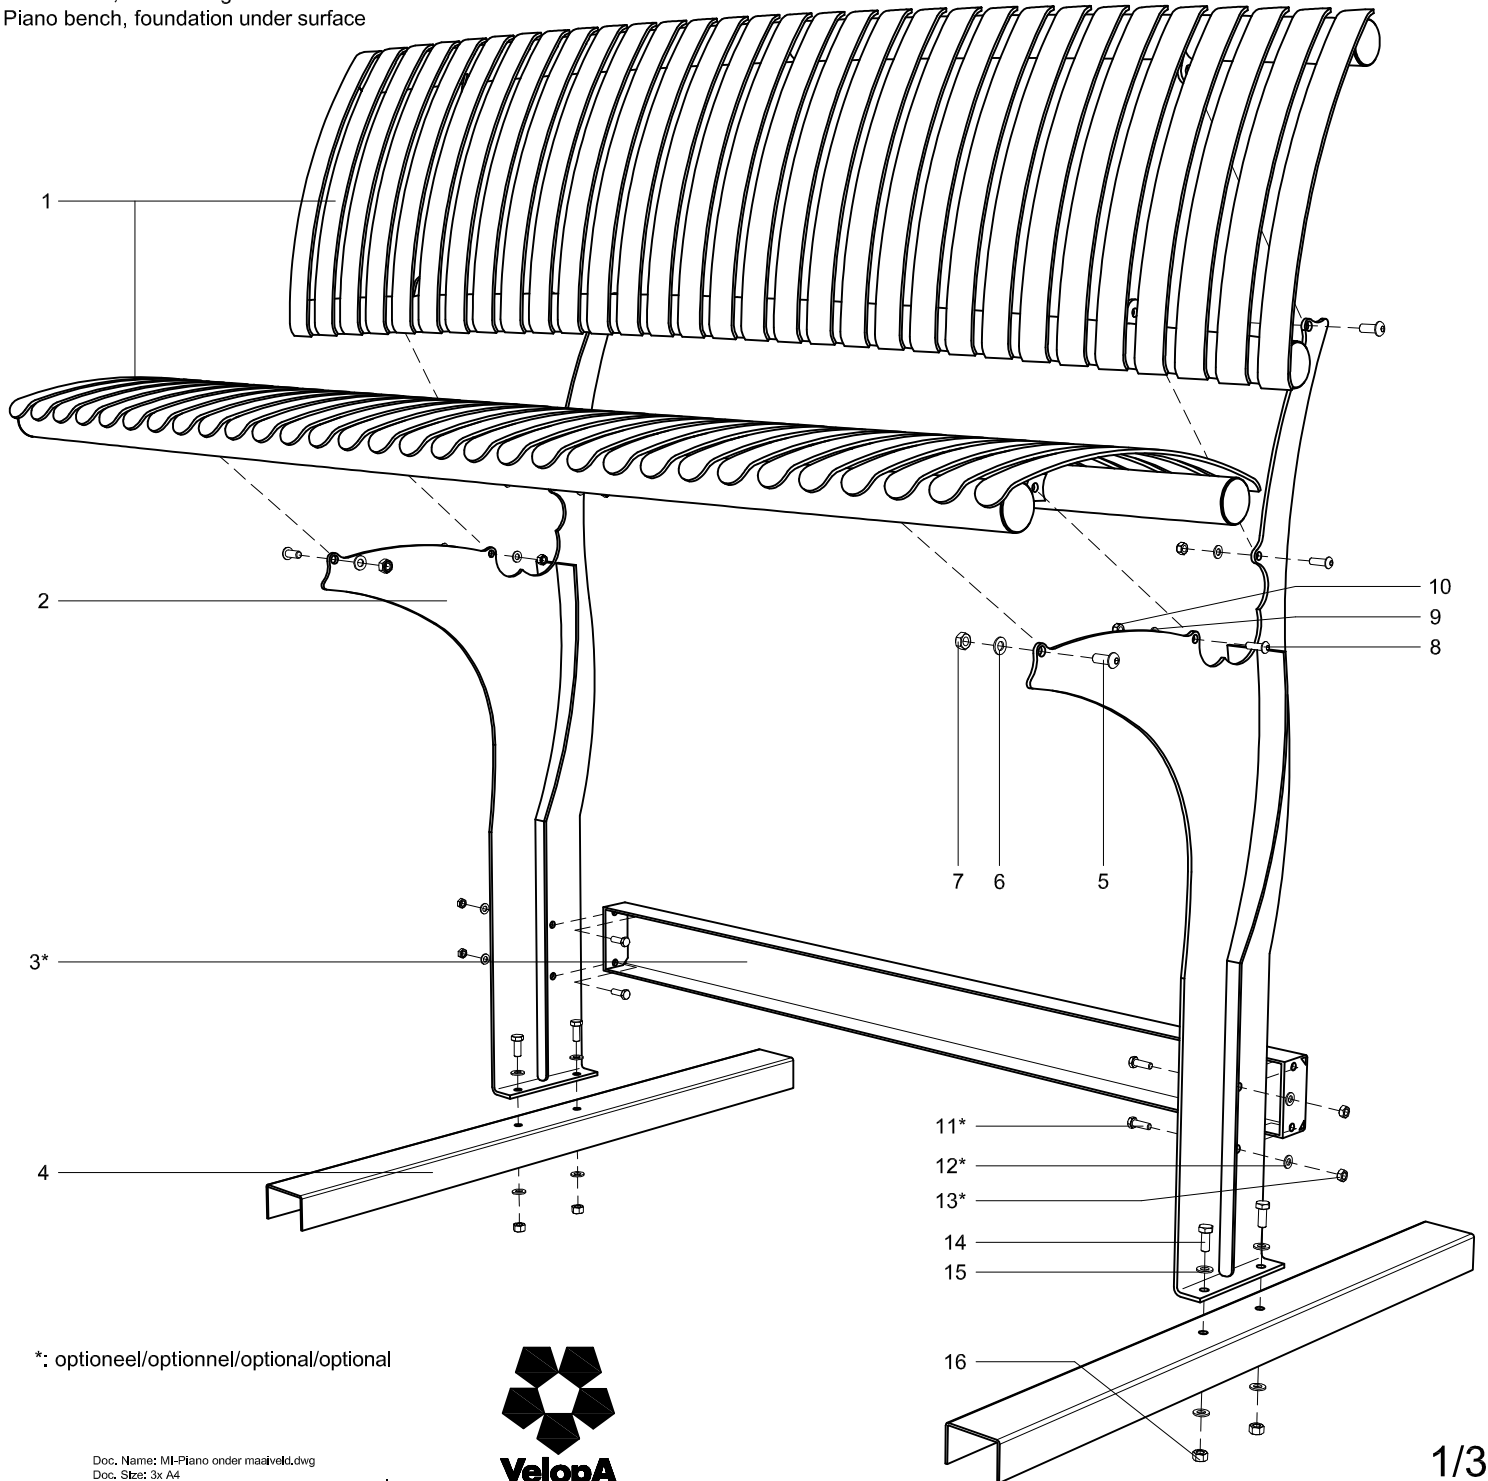

*: optioneel/optionnel/optional/optional




Doc. Name: MI-Piano onder maaiveld.dwg
 Doc. Size: 3x A4
 Rev. 00, 01-08-2006 RHO

www.velopa.com

1/3

Item	Art. nr.	Qty					
1	30119211/30119311	2x		zitting/rugleuning	assise/dossier	Sitzfläche/Rückenlehne	seat/back rest
2	30119411	2x		bankpoot	pied de banc	Bankbein	bench leg
3	30119590	1x		stabiliseerbalk (optioneel)	barre de stabilisation (optionnel)	Stabilisierungsbalken	stabilizer (optional)
4	30120200	2x		fundatiebalk	barre de fondation	Fundamentleiste	foundation profile
5	54930015	4x	M10x25	bolkop met binnnen-zeskant (RVS)	vis à tête bombée à six pans creux (Inox)	Flachrundkopf mit Innensechskant (Edelstahl)	hexagon socket button head (SS)
6	54900410	4x	M10	sluistring (RVS)	écrou bloquant (Inox)	Verschlußring (Edelstahl)	washer (SS)
7	54900350	4x	M10	borgmoer (RVS)	rondelle (Inox)	Sicherungsmutter (Edelstahl)	prevailing torque nut (SS)
8	54930010	4x	M8x25	bolkop met binnnen-zeskant (RVS)	vis à tête bombée à six pans creux (Inox)	Flachrundkopf mit Innensechskant (Edelstahl)	hexagon socket button head (SS)
9	54900400	4x	M8	sluistring (RVS)	rondelle (Inox)	Verschlußring (Edelstahl)	washer (SS)
10	54900340	4x	M8	borgmoer (RVS)	écrou bloquant (Inox)	Sicherungsmutter (Edelstahl)	prevailing torque nut (SS)
11	52039000	4x	M8x25	zeskantbout (optioneel)	boulon tête hex. (optionnel)	Kopfschraube (optional)	hexagon bolt (optional)
12	54130000	4x	M8	sluisting (optioneel)	rondelle (optionnel)	Verschlußring (optional)	washer (optional)
13	54230000	4x	M8	moer (optioneel)	écrou (optionnel)	Mutter (optional)	nut (optional)
14	52040040	4x	M10x25	zeskantbout	boulon tête hexagonale	Kopfschraube	hexagon bolt
15	54140000	8x	M10	sluistring	rondelle	Verschlußring	washer
16	54240000	4x	M10	moer	écrou	Mutter	nut

1

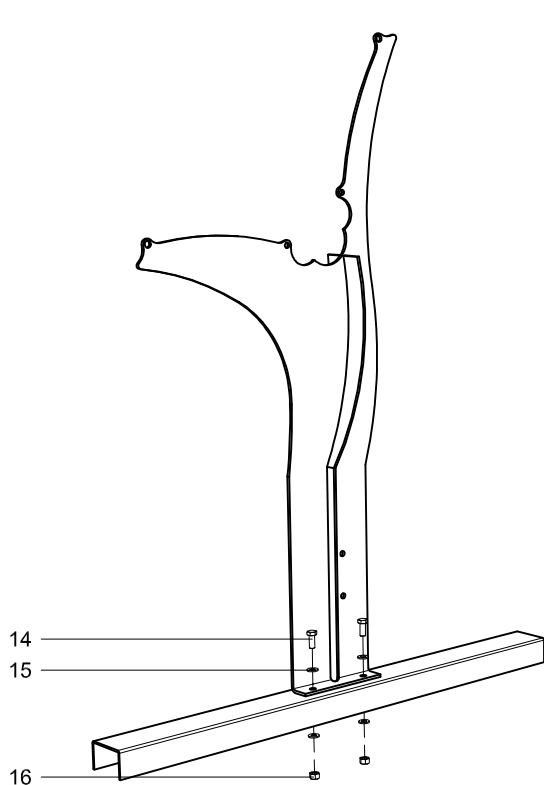


Graaf 2 gaten van min. 1200x300, 450mm diep en ca. 900mm uit elkaar.

Creusez 2 trous de 1200x300 minimum, 450mm de profondeur à environs 900 mm l'un de l'autre.

Graben Sie 2 Löcher jeweils 1200x300mm und 450mm tief, 900mm auseinander.

Dig 2 holes, at least 1200x300, depth 450mm and approx. 900mm apart from each other.

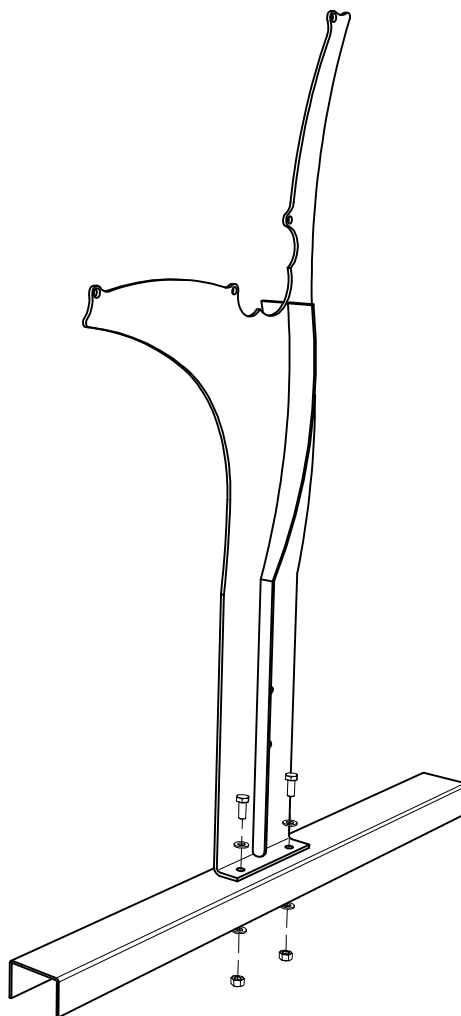

2


optioneel/optionnel/optional/optional

Indien de stabilisatorbalk wordt gebruikt, moet er 1 gat van ca. 1500x1200, 450mm diep gegraven worden, waar het geheel in geplaatst wordt.

En cas d'utilisation de barre de stabilisation, creusez 1 trou de 1500x1200, 450mm de profondeur pour y placer l'ensemble.


Falls der Stabilisierungsbalken montiert wird, ist ein Loch von 1500x1200mm, 450mm tief, erforderlich. Montiertes Element in das Loch platzieren.

If the stabilizer is used, one hole must be dug, sized 1500x1200, depth 450mm. Place the whole assembly in this hole.

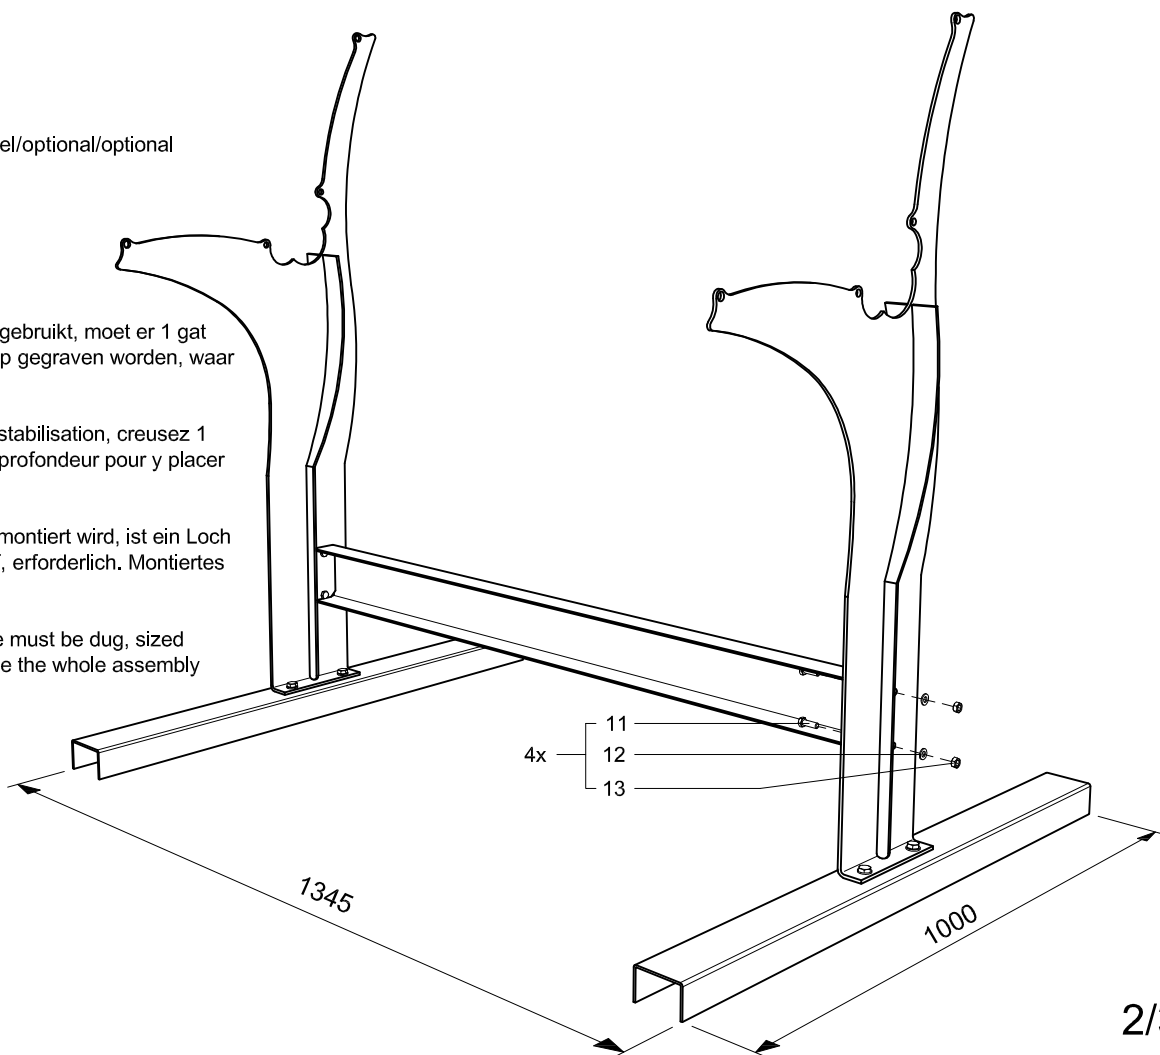

Bolle zijde van de zitting naar voren monteren!
 Montez le côté bombé d'assise vers l'avant!
 Die gewölbte Seite der Sitzfläche nach vorne montieren!
 Mount the bulged side of the seat to the front!

3

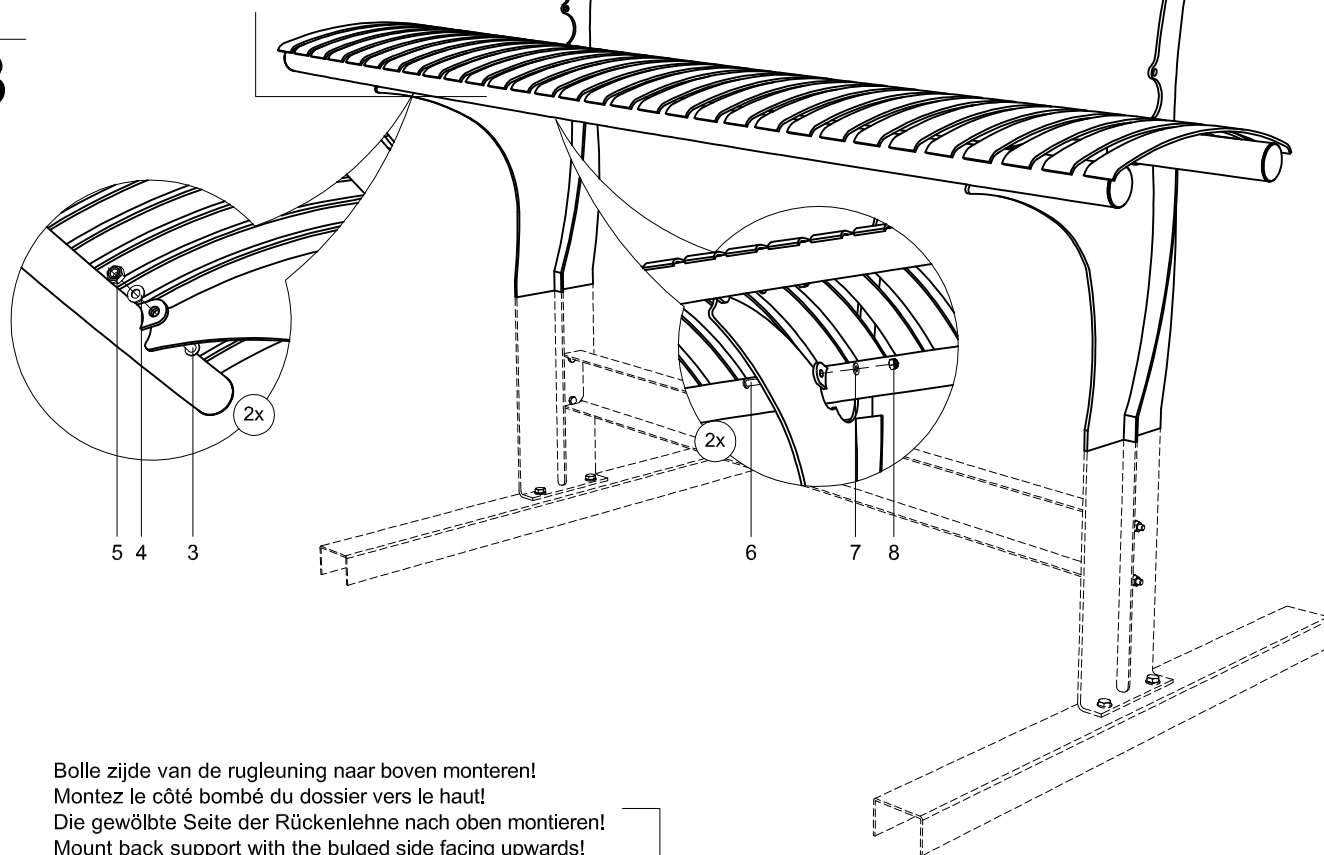

Bolle zijde van de rugleuning naar boven monteren!
 Montez le côté bombé du dossier vers le haut!
 Die gewölbte Seite der Rückenlehne nach oben montieren!
 Mount back support with the bulged side facing upwards!

4

